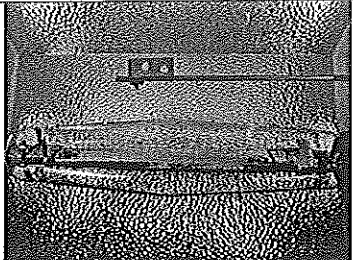
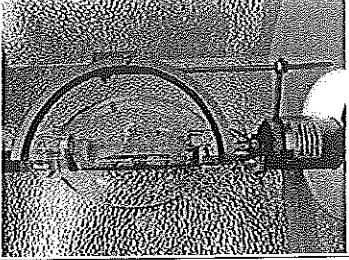
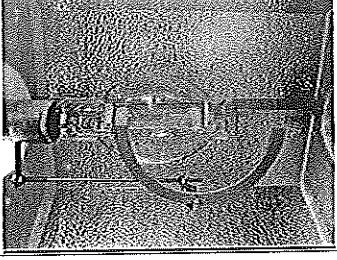
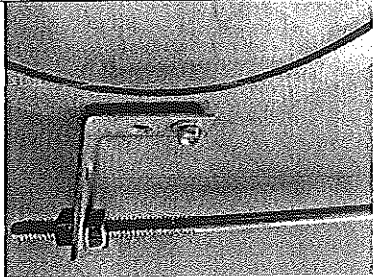
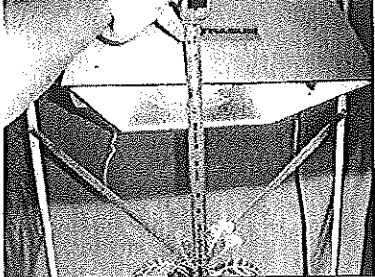
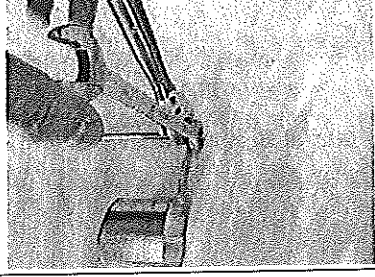


<p>(L) Bracket has 4 holes. The outside holes are used for larger lamps. The inside holes (closer in) are used for shorter or smaller lamps.</p>	<p>Line -up the edge of the HeatStopper™ guide ring, to the center of the lamp (the arc tube inside the lamp). The HeatStopper™ should be mounted 1 to 2 inches from the lamp for best results.</p>	<p>The example below is an INCORRECT installation of the HeatStopper™</p>
		
<p>The adjustable threaded brass rod is for mounting HeatStopper™ to different size lamps. On 400-watt lamps, the rod can be threaded all the way down. On 1000-watt lamps, the rod can be threaded almost all the way out.</p>	<p>Fixture can be placed anywhere from 6 to 12 inches from plant top. Test the fixture and plant using the HeatStopper™ for correct placement. The use of an infrared thermometer (heat gun) is best for this test. Top of plant temperature should be monitored. DAMAGE TO PLANT WILL OCCUR IF FIXTURE IS TOO CLOSE TO PLANT TOP</p>	<p>Make sure the (L) bracket and HeatStopper hardware is tight. If parts become loose, it will break the lamp and the HeatStopper™</p>
		
<p>Parts List:</p> <ol style="list-style-type: none"> 1. HeatStopper™ filter 2. (4) 1/4-20 7/16 nuts 3. (1)each #8 screw, nut and washer 4. (L) bracket 5. Brass 10 inch threaded rod 6. Instructions 		

Plant Light Manufacturing LLC™ is an innovative designer and manufacture of custom lamps, and other proprietary products for the plant industry.

For OEM and dealer opportunities, contact us at, www.plantlightmfg.com

PLM™ WARRANTS FOR A PERIOD OF (12) MONTHS FROM THE DATE OF SHIPMENT THIS PRODUCT SHALL BE FREE OF DEFECTS IN MATERIALS AND WORKMANSHIP. PLM™ MAKES NO WARRANTY RELATING TO WATER DAMAGE, MISUSE, MODIFICATION, DAMAGE CAUSED BY FINGERPRINTS, CHEMICALS, IMPROPER USE INCLUDING, CLEANING, BROKEN GLASS, CRACKED OR CHIPPED GLASS, SCRATCHED GLASS, DISCOLORATION OR AGING. PLM™ MAKES NO OTHER EXPRESS WARRANTIES. PLM™ MAKES NO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. PLM SHALL ONLY BE OBLIGATED TO EITHER REPAIR OR REPLACE THE COMPONENT AT PLM'S™ OPTION, REPAIR OR REPLACEMENT OF THE PART IS THE PURCHASER'S EXCLUSIVE REMEDY. PLM™ IS NOT RESPONSIBLE FOR LOSS OF PROFITS, EXPENSES, DAMAGES, ETC. OR FOR BREACH OF WARRANTY, OR NEGLIGENCE ON THE PART OF PLM LLC 1011™