



Here at Hydrofarm, we've identified a potential issue with the LGBTQM logging software installation on some operating systems. We are working on a solution, and when it is available we will update the installer on our website. Until that time, please use the following steps to address the issue.

1. Open windows explorer and search for **zedgraph.dll**, right-mouse click and hit copy and paste it to your desktop.

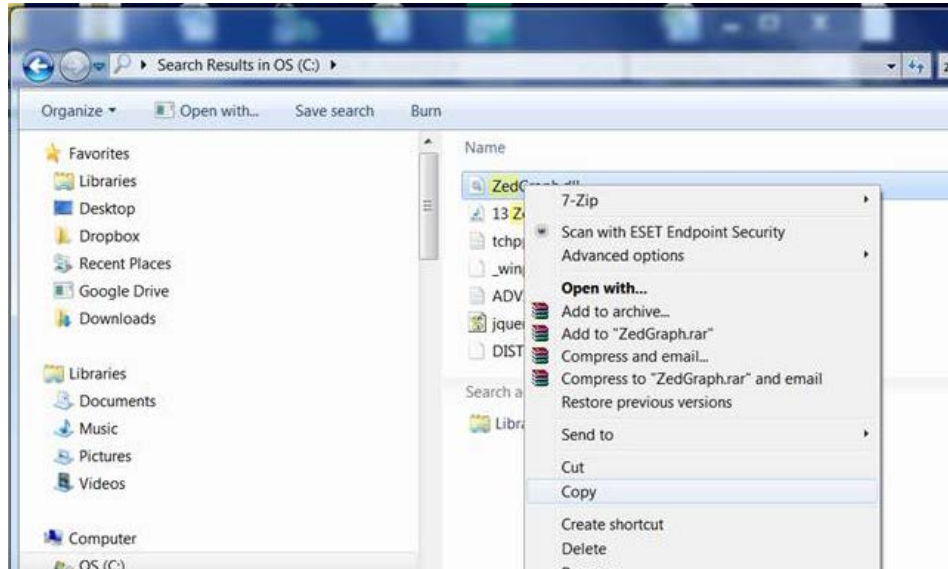

2. Next, find the Quantum Light Meter icon on your desktop and again, right mouse click and hit "Properties". Click on the shortcut tab if it isn't up, and highlight all the text in the box labeled "Start in:"...

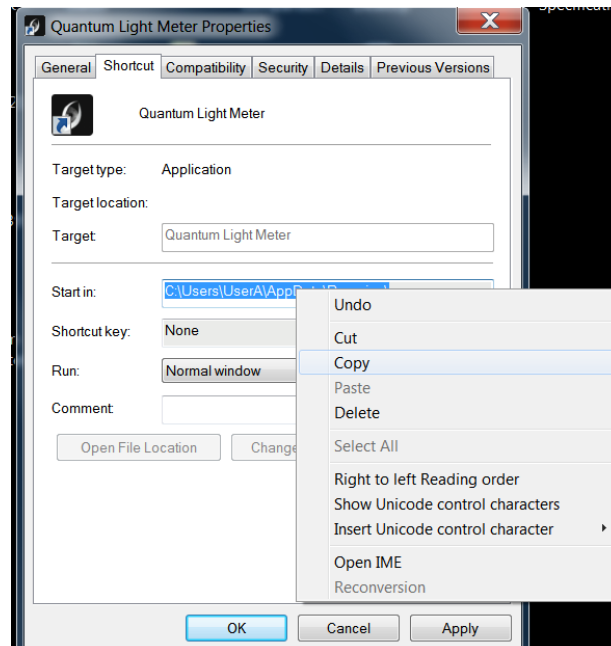

3. Open windows explorer and paste that address into the address bar. Then drag zedgraph.dll from your desktop to the directory you just opened. Close windows explorer, and double click on the icon for the Quantum Par Meter. It should open normally at that point. If all is well, feel free to remove zedgraph.dll from your desktop if it remains.